



VoIP Speaker Configuration Guide

NQ-S1810CT, NQ-S1810WT



BOGEN®

© 2021–2026 Bogen Communications LLC

All rights reserved

740-00024J

260506

Contents

- Configuring the Nyquist VoIP Speakers 1**
 - Using the Dashboard3
 - Updating Firmware5
 - Network Settings Tab Parameters7
 - Configuration Settings Tab Parameters9
 - Accessing Log Files13
 - Log Settings14
 - Status Reporting Settings.....15
- Appendix A: Bogen Digital Certification Authority 18**
 - Installing Certification Authority on Windows System18
 - Installing Certification Authority on Mac System19
 - Installing Certification Authority on an Android Device20
 - Installing Certification Authority on an iOS Device20
 - Viewing the Certificate20

Configuring the Nyquist VoIP Speakers

The Nyquist VoIP Ceiling Speaker (NQ-S1810CT) and Nyquist VoIP Wall Baffle Speaker (NQ-S1810WT) are VoIP talkback speakers designed to work with the Nyquist Series IP network-based intercom and paging solution.

The ceiling talkback speaker assembly consists of an 8" cone speaker and VoIP module preassembled onto a 13" steel ceiling grille painted with bright white enamel.

The VoIP wall baffle talkback speaker assembly consists of an 8" cone speaker and VoIP module preassembled onto a bright white injection-molded wall baffle speaker enclosure.

Both types of speakers are 802.3af-compliant and are designed to facilitate rapid and efficient deployment using existing network Power over Ethernet (PoE) ports. These VoIP speakers enable ease of placement wherever needed within a facility.

The following sections describe the process for manual configuration. For information about using Nyquist's automatic configuration process, refer to the appropriate *Nyquist System Administrator Guide*.

Note: Do not use third-party browser extensions with the Nyquist user interface.

To access the appliance's Web-based user interface (UI):

- 1 Before accessing the web UI for the first time, the Bogen Certification Authority (CA) digital certificate must be installed on the client. This certificate can be downloaded from any Nyquist appliance and enables your browser to recognize the Nyquist web application as a trusted site.

For details on how to download and install the certificate to your client computers, see "*Bogen Digital Certification Authority*" on page 18.

- 2 Access the appliance's web UI by doing one of the following:
 - a) On your web browser, enter the IP address for the appliance as the URL.
 - b) From the Nyquist server's web UI navigation bar, select **Stations**, select **Stations Status** or **Appliance Status**, navigate to the device that you want to configure, and then select the **Link** icon.
 - c) From the Nyquist server's **Appliance Discovery Wizard**, select the **Link** icon for the device that you want to configure.

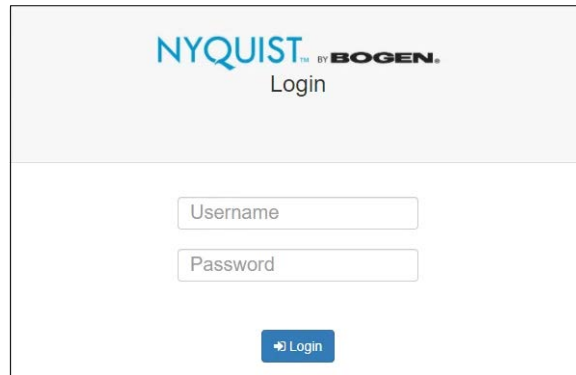
The image shows a login page for a Nyquist appliance. At the top, there is a header with the text "NYQUIST™ BY BOGEN." in blue and black, and "Login" in black below it. The main area contains two input fields: "Username" and "Password", both with light gray borders. Below these fields is a blue button with a white right-pointing arrow and the text "Login".

Figure 1. Nyquist Appliance Login

- 3 At the Nyquist appliance's Login page, enter username and password, then press enter or click on the **Login** button.

The default username is `admin`; the default password is `bogen`.

Note: After a successful login, a warning will be displayed if the default password is still in use. We strongly encourage changing the default password as soon as possible.

When you have logged in successfully, you will be presented with the dashboard for the appliance.

Using the Dashboard

The screenshot shows a web dashboard titled "Dashboard" with a help icon. It contains several input fields and a slider. The fields are: "Device Type" with the value "Nyquist VoIP Speaker", "Serial Number" with "2912WTHR0383", "MAC Address" with "6CECEBA22526", and "Firmware Version" with "#.#.####". Below these is a toggle switch for "Enable/Disable Volume Cut Level Slider" which is currently "Disabled". At the bottom is a "Volume Cut Level (dB)" slider set to "-21".

Field	Value
Device Type	Nyquist VoIP Speaker
Serial Number	2912WTHR0383
MAC Address	6CECEBA22526
Firmware Version	#.#.####
Enable/Disable Volume Cut Level Slider	Disabled
Volume Cut Level (dB)	-21

Figure 2. Nyquist Speaker Dashboard

The dashboard displays the following fields:

Table 1. Appliance Dashboard Fields

Device Type	Identifies the model of this device.
Serial Number	Identifies the serial number for the device.
MAC Address	Identifies the Media Access Control (MAC) address, which is a unique identifier assigned to network interfaces for communications on the physical network segment.
Firmware Version	Identifies the firmware version installed on the device.

Table 1. Appliance Dashboard Fields

Enable/Disable Volume Cut Level Slider	Enables or disables the Volume Cut Level slider.
Volume Cut Level (dB)	Specifies a temporary volume setting for the speaker during the current intercom call or page. <i>Note:</i> This is a temporary adjustment that allows the user to experiment with the loudness of the speaker and will be reset to the normal setting on subsequent calls. To make permanent adjustments, change the station-specific cut level settings on the Nyquist System Controller. The value can be adjusted between -42 and 0 dB.

The following buttons are available at the top of all pages in the application.

Table 2. Appliance Dashboard Buttons

Dashboard	Displays the dashboard.
Configuration Settings	Accesses the Configuration Settings page where you can view and set various options.
Network Settings	Accesses the Network Settings page where you can view and set network settings, such as the static IP address.
Firmware Update	Accesses the Firmware Update page where you can view the current Nyquist version, update firmware to a new version, restore the configuration to factory defaults, and reboot the appliance.
Logs	Accesses log files, which record either events or messages that occur when software runs and are used when troubleshooting the appliance.
Help	Accesses the appliance's online help.
Manual	Displays this appliance's configuration guide.
Logout	Logs out of the appliance's web UI.

This device can also run in Standalone Operation mode, where it will not interact with a Nyquist server (e.g., E7000 or C4000). This means the device will not:

- Fetch device configuration from Nyquist server
- Register with Nyquist server (via SIP)
- Store backup information to Nyquist server

- Allow access to Nyquist server-based NTP

Standalone Operation allows this device to be used without a Nyquist server as a generic SIP endpoint when integrated with a 3rd-party VoIP telephone system or other SIP server-based solutions, such as a unified communications (UC) platform. In a non-SIP environment, these devices are capable of receiving audio through one or more prioritized multicast channels.

Important: Appliances maintain a distinct web username and password for Standalone Operation. It may be helpful to record this standalone-mode username and password or set them to the default or well-known values before switching to non-standalone mode. This username and password will be needed to log in when and if the appliance is subsequently returned to standalone mode. The standalone-mode username and password will be set to the default values if the appliance is reset to the factory default configuration.

Updating Firmware

When you select **Firmware Update** from the appliance's web UI, the Firmware Update page appears. From this page you can determine which Nyquist firmware version the appliance is using and if an update is available. You can also load a firmware release, install the loaded firmware, restore the configuration to factory defaults, and reboot the appliance.

Note: A Nyquist appliance connected to the Nyquist network receives a configuration file from the Nyquist server that includes the latest firmware available from the server. If the firmware is different from the one installed on the appliance, an automatic firmware update occurs unless the **Firmware** parameter for the station is left blank. Refer to the *Nyquist System Administrator Guide* for more information.



Note: Some buttons only appear on this page when applicable.

Figure 3. Firmware Update Page

To use the Firmware Update page:

- 1 On the appliance web UI's main page, select **Firmware Update** to view or update the firmware version.
 - If you already have a firmware file you would like to install to the appliance, select **Upload Firmware** to upload the firmware file from your computer to the appliance. A popup screen appears that allows you to select the file that you want to upload. You can navigate to the file's location. After you select the file, select **Upload**.

The page displays the uploaded firmware version ("New Nyquist Version") and an **Update Firmware** button appears. Select this button if you want to update the appliance's firmware to the uploaded version.

 - If you want to return your appliance to its original factory configuration, select **Restore Factory Settings**.
 - Select **Reboot Appliance** to restart your appliance.

Table 3. Firmware Update settings

Current Nyquist Version	Shows the version of the appliance's currently installed firmware.
New Nyquist Version	Shows the version of the firmware that has been loaded, though not installed, onto the appliance.

Table 3. Firmware Update settings

Update Firmware	Available only when a new firmware version has been loaded onto the appliance (as specified in New Nyquist Version). Installs the loaded firmware. A reboot may be required after installation.
Upload Firmware	Prompts the user to specify a firmware file, which will then be loaded (though not installed) onto the appliance. <i>Note:</i> To obtain the firmware file for a specific version, please contact Bogen Technical Support.
Restore Factory Settings	Returns the appliance to its original factory configuration. <i>Note:</i> This does not install the original appliance firmware. The firmware will not be changed.
Reboot Appliance	Restarts the appliance.

Network Settings Tab Parameters

Network settings can be configured dynamically by the Nyquist server or manually by using the appliance's web UI.

To manually configure network settings:

- 1 On the appliance web UI's main page, select **Network Settings**.
- 2 Select your desired network settings.
- 3 Select **Save**.

 **Network Settings**   Network Traffic Capture

IP Address:

192.168.90.18

Netmask:

255.255.255.0

Gateway:

192.168.90.1

VLAN ID:

VLAN Priority:

0 - Best Effort ▾

NTP Server:

192.168.90.10

TFTP Server:

192.168.90.10

TFTP Server from DHCP:

Yes ▾

DHCP Enabled:

Yes ▾

Reboot Appliance:

No ▾

 Save

Figure 4. Network Settings

Network settings are described in the following table:

Table 4. Network Settings

Network Traffic Capture	Captures network traffic on this appliance and saves it to a PCAP file that can be downloaded to the user’s computer. For details, see <i>Network Traffic Capture</i> in the Nyquist System Administrator Guide.
IP Address	Identifies the IP address assigned to the appliance.
Netmask	Identifies the subnetwork subdivision of an IP network.
Gateway	Identifies the address, or route, for the default gateway.
VLAN ID	Identifies the Virtual Local Area Network (VLAN) for this appliance. Values range from 0 to 4094.
VLAN Priority	Identifies the priority of the network traffic on the VLAN. Priority can range from 0 through 7.

Table 4. Network Settings (Continued)

NTP Server	Identifies the IP address or the domain name of the Network Time Protocol (NTP) Server.
TFTP Server	Identifies the host name or IP address of the Trivial File Transfer Protocol (TFTP) server. The specified TFTP server can be used to automatically set this device's Configuration settings via the Get Configuration from Server button. If TFTP Server from DHCP (see below) is set to "Yes", this value will be auto-configured via DHCP option 66, assuming the DHCP server has been configured to provide option 66. For details, see the documentation for your DHCP server. <i>Note:</i> A TFTP server runs on the Nyquist server on port 69 (the standard TFTP port) and the optional Nyquist DHCP service automatically provides this TFTP address via option 66. <i>Note:</i> If this value is unspecified, the TFTP Server from DHCP will automatically be set to "Yes", this field will become read-only, and DHCP will be used to configure this setting. To change this value, the TFTP Server from DHCP setting must be set to No, which makes the field editable.
TFTP Server from DHCP	Yes means the device will use the DHCP option 66 value to retrieve an address for the TFTP Server from DHCP. No means the device will ignore the DHCP option 66 value and use the manually configured value of the TFTP Server (see above).
DHCP Enabled	Indicates if the device is enabled to use DHCP to retrieve its IP configuration.
Reboot Appliance	Indicates that this appliance should reboot when the Save button is clicked.

Configuration Settings Tab Parameters

The easiest way to configure Nyquist appliances is to obtain configuration settings from the Nyquist server by selecting **Get Configuration From Server**.

To view the Nyquist appliance configuration:

- 1 On the appliance Web UI's main page, select **Configuration Settings**.
- 2 View the settings as described in Table 5 on page 10 for normal configuration.

Configuration Settings

Get Configuration From Server

Web Username: admin

	IP Address	Port Number	Cut Level	Station List
Emergency-All-Call:	239.0.1.1	6000	-21	1
All-Call:	239.0.1.2	6004	-21	1
Audio Distribution:	239.0.1.3	6008	-24	1

Nyquist Control Password

Save Password

Device Stations

Port Number	Port Type	Account Id	Local Port	Username
1	Digital-Call-Switch-With-Speaker	sips:0110@172.31.19.202	5060	0110

Digital Call Switches

Volume Control Switches

Figure 5. Appliance Configuration Settings

The following table describes the **Configuration Settings** tab settings:

Table 5. Configuration Settings

Get Configuration from Server	Retrieves configuration settings (i.e., web username, server, and local port) from the TFTP server specified in the Network Settings (see "Network Settings Tab Parameters" on page 7).
Web Username	Displays the username of the current user.
Emergency-All-Call	Identifies the IP address, port number, cut level (volume), and station list used for emergency all-call pages.

Table 5. Configuration Settings

All-Call	Identifies the IP address, port number, cut level (volume), and station list used for all-call pages.
Audio Distribution	Identifies the IP address, port number, cut level (volume), and station list used for audio distribution.
Multicast #	Identifies the IP address, port number, cut level (volume), and station list used for the multicast audio stream of a specific zone. If this device belongs to more than one zone, then multiple Multicast # entries will be displayed.
Nyquist Control Password	Specifies a password used to secure Nyquist control messages between this device and the Nyquist server. This value must match the password specified on the Nyquist server to support certain Nyquist features, such as sound masking, amp protection mode, and station check-in. The specified password must be exactly 20 characters long and include uppercase, lowercase, and numeric characters. <i>Note:</i> This password cannot be set unless the Web Password has been changed from the default value.

The **Configuration Settings** tab also displays the following information for each **Device Station** attached to the amplifier:

Port Number	Identifies the port number of the appliance.
Port Type	Identifies the station type to which the port connects.
Account ID	Identifies the SIP account (IP address) associated with the device preceded by the extension of the device associated with this port.
Local Port	Identifies the port used for SIP.
Username	Identifies the username or extension for the station associated with the port.
Digital Call Switches	Identifies the serial numbers of all Nyquist Digital Call Switches (NQ-E7020-G2) connected to this appliance.
Volume Control Switches	Identifies the serial numbers of all Remote Volume Controls (NQ-VCTRL) connected to this appliance.

Accessing Log Files

A log file records events and messages that occur when software runs, to be used when troubleshooting the appliance. From the appliance's web-based UI, log files can be viewed directly or exported via download to your PC, Mac, or Android device, where they can be copied to removable media or attached to an email for technical support.

To view a log file:

- 1 On the appliance Web UI's main page, select **Logs**.
- 2 From the drop-down menu, select the log that you want to view.
Multiple versions and zipped copies of a log may be available.
- 3 To export the file, select **Export**.
The log file will be downloaded to your browser.

The screenshot displays the 'View Logs' section of the appliance's web-based UI. At the top, there is a 'View Logs' header with a document icon and an information icon. Below this, a dropdown menu shows 'sw_versions.log' selected, and the file path '/var/log/sw_versions.log' is displayed. An 'Export' button is located next to the file path. The main content area shows the log data for 'Debian 8.6 - Linux kernel version: 4.9.0-rc7-bone3 #5 Fri Dec 2 09:26:11 EST 2016 armv7l GNU/Linux'. Below the log data, there is a 'Software Components:' section. The bottom of the screenshot shows two settings panels: 'Log Settings' and 'Status Reporting Settings'. The 'Log Settings' panel includes a 'Logging Level' dropdown set to 'ERROR', a 'Logging Categories' section, and several toggle switches for 'Log Registration', 'Log Intercom', 'Log Check-In', 'Log Multicast', 'Log PTT', and 'Log Sound Masking', all currently set to 'No'. A 'Save' button is at the bottom of this panel. The 'Status Reporting Settings' panel includes an 'Enable Status Reporting' dropdown set to 'No', a 'Network IP Address' input field, a 'Network Port' input field set to '0', a 'Status Reporting Categories' section, and toggle switches for 'Intercom' and 'Paging', both set to 'No'. A 'Save' button is at the bottom of this panel.

Figure 6. Logs

Available logs are described in the following table.

Table 6. Logs

Log	Description
ampws.log	Contains information about protection status and logs protection events with temperature information at the time of event.
auth.log	Contains system authorization information, including user logins and authentication methods that were used.
daemon.log	Contains information logged by the various background daemons that run on the system.
debug	Contains errors and debug information.
dmesg	Contains information about hardware, device driver initialization, and kernel module messages that take place during system startup.
dpkg.log	Contains information that is logged when a package is installed or removed using dpkg command.
kern.log	Contains information logged by the kernel and recent login information for all users.
messages	Contains messages generated by Nyquist.
sw_versions.log	Contains the names and version numbers of key software components used by the Nyquist appliance.
syslog	Contains list of errors that occur when the server is running and server start and stop records
user.log	Contains information about all user level logs.

Log Settings

Log Settings provides the ability to specify the level of detail to be logged at run time (in the *syslog* and *daemon.log* files) for each of several categories.

Note: These settings do not filter the display of events that have already occurred; they indicate which subsequent events will be logged.

Table 7. Log Settings

Logging Level	Indicates the level of detail to be logged at runtime. Valid values are: NONE: No Nyquist logging will be performed. ERROR: Only error conditions will be logged. These are conditions that prevent the appliance from operating correctly. WARNING: Warning and error conditions will be logged. INFO: All information will be logged, including informational, warning, and error conditions. The default value is ERROR.
Logging Categories	Indicates which event categories will be logged for this device. Any number of categories can be enabled. By default, all categories are disabled.
Log Registration	Log detailed information related to station registration.
Log Intercom	Log detailed information related to intercom calls to and from the appliance, as well as talkback parameters.
Log Check-In	Log detailed information related to station check-ins.
Log Multicast	Log detailed information related to incoming multicast pages or audio distribution.
Log PTT	Log detailed information related to Push-to-Talk features.
Log Sound Masking	Log detailed information related to amplifier sound masking, such as spectrum preset applied, slow and fast ramping, and scheduled ramping.

Status Reporting Settings

The **Status Reporting Settings** section provides the ability to configure network-based status reporting for this device.

When an event of any of the specified **Status Reporting Categories** occurs, a JSON packet will be sent to the specified IP address and UDP port containing the event information. The JSON will be formatted in the following format (the fields are described in *Table 8, "Status Event JSON elements," on page 16*):

```
{"device":"<string>","port":<int>,"event":"<string>","state":"<string>"}
```

Table 8. Status Event JSON elements

JSON key	Value Description
device	MAC address of the reporting station, with hexadecimal bytes separated by colons (:).
port	The port on the Nyquist appliance to which the reporting station is connected. Valid integer values range from 1 (for most appliances) to 24.
event	The type of event that occurred. Valid values are: • INTERCOM • PAGE
state	The status of the event. Valid values are: • PENDING • IN_PROGRESS • TERMINATED

To configure the Status Reporting for this appliance, set **Enable Status Reporting** to **Yes**, configure the **Network IP Address** and **Network Port** (a UDP port) to which status

events will be sent, and specify which **Status Reporting Categories** to send, as described in *Table 9*.

Table 9. Status Reporting Settings

Enable Status Reporting	Enables network-based status reporting whenever a call changes state on a given port. PENDING: Call setup in progress, but not yet connected. IN_PROGRESS: Call or page established. TERMINATED: Call or page ended. This setting is disabled by default.
Network IP Address	The network IP address to which status messages will be sent.
Network Port	The network UDP port to which status messages will be sent.
Status Reporting Categories	Status event types to be sent to the event logging server.
Intercom	Report intercom-related events.
Paging	Report paging-related events.

Appendix A: Bogen Digital Certification Authority

When a client (e.g., a web browser) connects to the Bogen device's web application, the device's digital certificate is sent to the client to authenticate the identity of the device's web application. The client uses the Bogen Certification Authority (CA) certificate to authenticate the device's digital certificate, which verifies that the client is connecting to a valid server. If the Bogen CA certificate is not installed on the client, the browser will display a warning that it was unable to authenticate the server, displaying a red *Not secure* warning immediately to the left of the browser's address bar (or a similar warning, depending on the browser) after it attempts to access the Bogen device.

The following sections provide instructions for downloading and installing the Bogen CA in various environments.

Tip: The Bogen CA can be downloaded using the cURL command instead of via the browser. If you prefer that method, issue the following command in lieu of step 1 of the subsequent installation instructions:

```
curl.exe --insecure https://<device>/ssl/bogenCA.crt > bogenCA.crt
```

Tip: Some browsers do not recognize newly installed CAs until after the browser has restarted. Browse to <chrome://restart> in a Chromium-based browser or <edge://restart> in the Edge browser to restart all open browser windows.

Installing Certification Authority on Windows System

To download and install the Certification Authority on a Windows device:

- 1 From your Chrome or Edge browser, type `http://<device>/ssl/bogenCA.crt` in the address bar, where `<device>` is the Nyquist device's IP address or DNS name (for example, `http://192.168.1.0/ssl/bogenCA.crt`).
- 2 Select the downloaded file and select **Open**.
- 3 Select Open when prompted with "Do you want to open this file?"
- 4 Select the **Install Certificate...** button. The Certificate Import Wizard starts.
- 5 Select **Current User**, and then select **Next**.

Note: To allow *all* users on this Windows client to access the Nyquist device, select **Local Machine** instead of **Current User**. You may be prompted for administrator credentials.

- 6 Select "Place all certificates in the following store", then select **Browse**.
- 7 Select **Trusted Root Certification Authorities**, and then select **OK**.
- 8 Select **Next**.

9 Select **Finish**.

10 Restart the browser and log in to the device's web application.

Install Certificate Authority using PowerShell (optional)

You can optionally download and install the Certification Authority using a PowerShell command prompt or script, which involves fewer steps.

To download the certificate to a CRT file, execute the following PowerShell command, replacing <device> with the IP address or DNS name of the Nyquist device:

```
Invoke-WebRequest -Uri http://<device>/ssl/bogenCA.crt -OutFile $env:TEMP\bogenCA.crt
```

To optionally validate the certificate before importing it, execute the following command:

```
[Security.Cryptography.X509Certificates.X509Certificate2]::new(  
"$env:TEMP\bogenCA.crt").GetCertHashString() -eq '0A8248F69D970F8DD855D0E0592972DA64B1A845'
```

If the command returns True, the certificate is valid.

To install the CA certificate into the CurrentUser certificate store, which only applies to the current user, execute the following command:

```
Import-Certificate -CertStoreLocation cert:\CurrentUser\Root -FilePath $env:TEMP\bogenCA.crt
```

To install the certificate for all users on this machine, which requires administrator privileges to execute, execute the following command:

```
Import-Certificate -CertStoreLocation cert:\LocalMachine\Root -FilePath $env:TEMP\bogenCA.crt
```

Note: These commands can be executed remotely using PowerShell Remoting, which may be helpful if the certificate needs to be installed on multiple client machines.

Installing Certification Authority on Mac System

To download and install the Certification Authority on a Mac:

- 1 From your Safari browser, type `http://<device>/ssl/bogenCA.crt` in the address bar, where <device> is the Nyquist system device's IP address or DNS name (for example, `http://192.168.1.0/ssl/bogenCA.crt`).
- 2 Save the downloaded `bogenCA.crt` file to the desktop.
- 3 Double-click the certificate file on the desktop.
The Keychain Access App opens.
- 4 Double-click the certificate to reveal the trust settings.
- 5 Change the top trust setting to **Always Trust**.
- 6 Close the Trust Setting window and enter the computer administrative password to save.
- 7 Restart the browser and log in to the Nyquist web application.

Installing Certification Authority on an Android Device

Note: The Android device WiFi must be connected to the same network as the Nyquist Server.

To download and install the Certification Authority on an Android device:

- 1 From your Chrome or Edge browser, type `http://<device>/ssl/bogenCA.crt` in the address bar, where `<device>` is the Nyquist device's IP address or DNS name (for example, `http://192.168.1.0/ssl/bogenCA.crt`).
- 2 If prompted, verify your identity (e.g., enter your PIN or fingerprint).
- 3 Type a certificate name (e.g., "Bogen CA"), specify "VPN and apps" under "Used for", and select **OK** to install the certificate.

Installing Certification Authority on an iOS Device

Note: The iOS device WiFi must be connected to the same network as the Nyquist Server.

To download and install the Certification Authority on an iPhone Operating System (iOS) device:

- 1 From your Safari browser, type `http://<device>/ssl/bogenCA.crt` in the address bar, where `<device>` is the Nyquist device's IP address (for example, `http://192.168.1.0/ssl/bogenCA.crt`).
- 2 Select **Go**.
- 3 Select **Allow** when prompted to allow the download.
- 4 Select **Close** after the notification that a profile was downloaded.
- 5 Select **Settings > General > VPN & Device Management**.
- 6 Select the **Bogen CA** certificate under **DOWNLOADED PROFILE**.
- 7 Select **Install**.
- 8 If prompted, enter your passcode.
- 9 On the **Warning** page, select **Install**.
- 10 Select **Done**.
- 11 Select **Settings > General > About > Certificate Trust Settings**.
- 12 Under **ENABLE FULL TRUST FOR ROOT CERTIFICATES**, enable the switch next to **Bogen CA**.

Viewing the Certificate

The following steps outline how to view and verify the TLS/SSL certificate that was provided by the Nyquist device.

Important: The user interfaces for browsers change not infrequently, so the exact details may vary from what is described in the following instructions. Some security packages can also affect the information available, such as antivirus software that injects its own CA certificate in lieu of the website's actual certificate, which has the effect of hiding the actual certificate from the user.

- 1 Browse to the Bogen device's web application in your browser (using Safari on iOS, Chrome or Edge on all other platforms).
- 2 Select the lock icon on the address bar of the browser (to the left of the URL).
- 3 Display the CA certificate by following one of the following steps:
 - a) On the Chrome or Edge browser, select **Connection is secure**, then select either **Certificate is valid**, the certificate icon, or **Certificate information** to display the Certificate Viewer dialog. Select the Details tab, then Bogen CA in the Certificate Hierarchy section.
 - b) On the Safari browser *[MacOS or iOS only]*, select **Show Certificate** in the window that appears.
 - c) As an alternative on Android devices, select the Android system's **Settings > Biometrics and security > Other security settings > View security certificates**, select the **USER** tab, and select the Bogen certificate.
- 4 Verify that the Bogen CA certificate is selected and not the server certificate (the server certificate's name will be an IP address). To verify that the certificate is valid, verify that the displayed fingerprint values match the following:

SHA-1: 0A 82 48 F6 9D 97 0F 8D D8 55 D0 E0 59 29 72 DA 64 B1 A8 45

SHA-256: 6B D0 D5 8D C8 F7 E8 03 9E A3 F1 52 32 1D 9C 5C 58 8B 4E FA DF 03 43 64 34 C2 6C 63 C5 4A AC 46